


# ADVANCE

## CONCRETE FORM, INC.

Part # 460102: 20 Gallon Sprayer W/ Honda GX120 Engine –

**Start Up Instructions:** Follow the below steps to Prime your Suntec pump on the ACF – 20 Gallon Sprayer. **\*\*\*DO NOT RUN PUMP WITHOUT OIL – IT WILL SEIZE\*\*\***

**Step #1:** Fill Honda GX120 4hp Engine with 10W-30 motor oil. Reference provided **Honda Engine Manual Page 8** for further recommendations. *Figure 1*

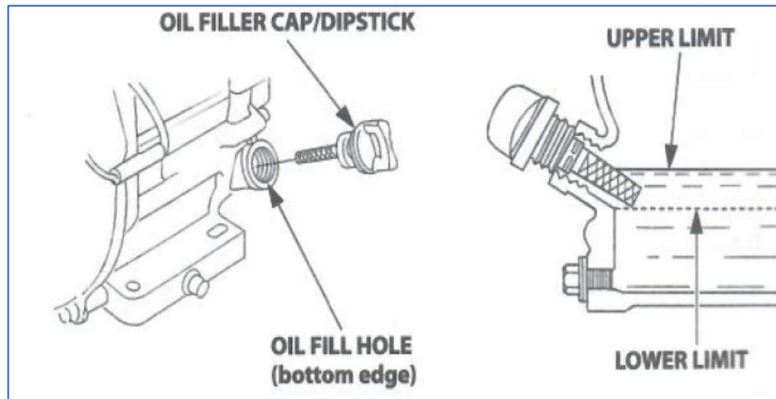

*Figure 1*

**Step # 2:** Remove 20 Gallon Tank Filler Cap and pour in Form Release until **END OF PICK UP TUBE is fully submerged** with form release in the tank. Insert Sprayer Wand into Tank and Open Valve on wand. *Figure 2*



*Figure 2*

[www.advanceconcreteform.com](http://www.advanceconcreteform.com)

Madison: 800.356.2202 - Manchester: 800.247.3227 – Wallingford: 800.646.2950 – Colorado: 800.535.8515

# ADVANCE

CONCRETE FORM, INC.

**STEP # 4:** Prime Pump by removing the plug on top of pump with a 5/8" wrench. Fill pump with form release. Reinstall plug and tighten. *Figure 3*



Figure 3

**STEP # 5:** Start engine. Form Oil should start **MISTING** from wand within 15-20 seconds. **IF NO MIST – SHUT DOWN.** If wand **IS MISTING** your sprayer is ready. If not move to STEP #6

**STEP # 6:** Locate the bleeder valve (*figure 4.*) Open valve and start engine. Form Release should come out valve when engine is running. **\*\*Caution as the form release will spray rapidly from valve. \*\*** Use a cup to catch form release. *Figure 4*



Figure 4

**STEP # 7:** Your sprayer should be operational – If not repeat STEPS #4 – 6.

**Do not run pump without oil.** Pump uses form release as a lubricant and will seize if form release isn't flowing through the pump. Any further issues call your local Advance Concrete Form, Inc. location for further information.

[www.advanceconcreteform.com](http://www.advanceconcreteform.com)

Madison: 800.356.2202 - Manchester: 800.247.3227 – Wallingford: 800.646.2950 – Colorado: 800.535.8515